

CLEVERTOUCH



► Clevertouch Plus

Quick Start Guide

Thank you for purchasing Clevertouch Plus, the market leading interactive display.



Clevertouch Plus is the next generation of Clevertouch and comes with in-built Android OS.

- Narrow bezel and modern design
- Front mounted USB ports for Android and inbuilt PC option
- 10-point touch & gesture control
- Integrated Android operating system and internal storage
- One-touch energy saving mode
- Toughened anti-glare glass
- Touch-control menu for on screen input selection
- Full HD 1080p resolution (1541015 75" and 84" 4K)

Clever software suite includes:

CLEVERLYNX 

CLEVERNOTE 

CLEVERSTORE

CLEVERMATHS

-  HDMI, VGA, RS232 and USB Connectivity
-  10-point touch
-  Integrated Speakers
-  Powered by Android OS
-  Integrated 8GB storage
-  Optional Built-in PC
-  No Shadow
-  Five Year Warranty
-  High Definition
-  Anti Glare Glass
-  Integrated Wi-Fi
-  Low Power Consumption

Call: +44 (0)20 8319 7777 | Email: info@clevertouch.co.uk | or visit: clevertouch.co.uk

▶ Using your Clevertouch without a PC

- The Android system works without a computer connected.
- Start by pressing the on button (on the 55" power this is at the side)
- To access the internet or Wi-Fi, you must either have an internet cable plugged into the port WAN or install the provided Wi-Fi dongle into one of the USB ports.
- Click Home > Apps > Settings > WiFi > there is an on / off switch at the top of the page




Wifi dongle can be inserted in the front USB slots as shown



Wifi dongle can also be inserted in the side USB2.0 slot as shown



Lan Port for network connectivity

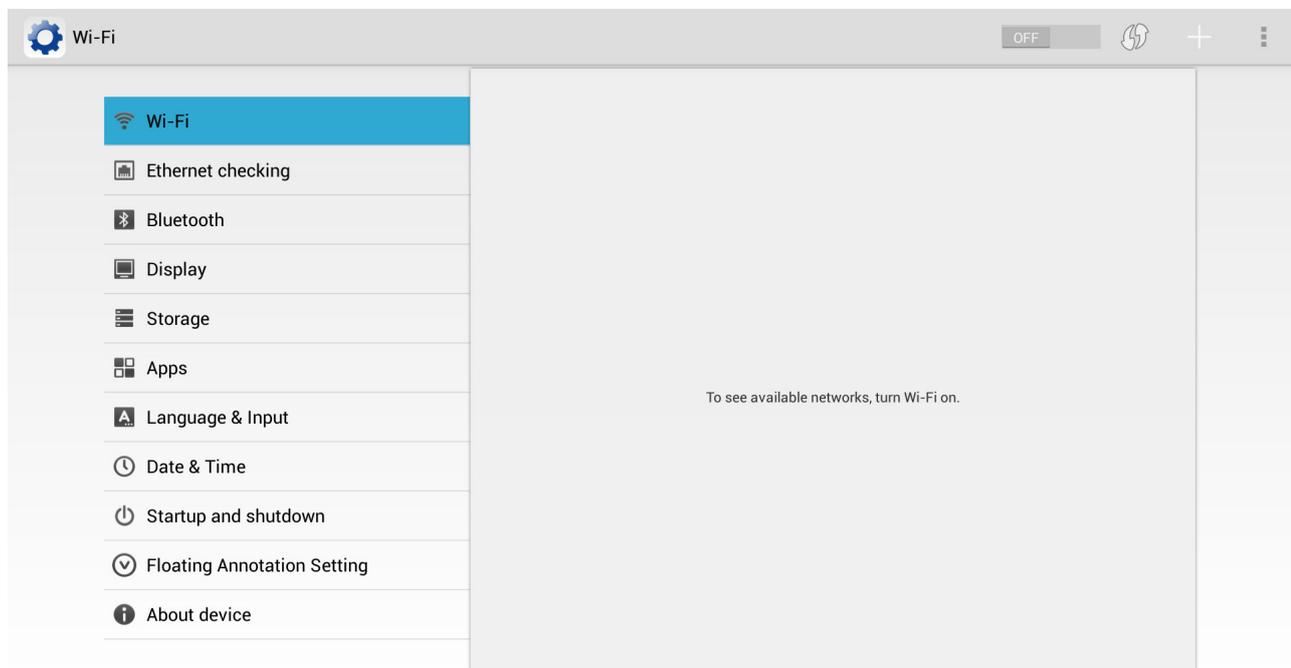

▶ Using your Clevertouch with an external PC




Using Clevertouch with computer

To connect a computer we have to connect:

- Monitor cable (VGA or HDMI) from PC to screen
- Audio cable (only required with VGA)
- Touch Cable (USB cable) to screen and PC

► Physical buttons on the Clevertouch

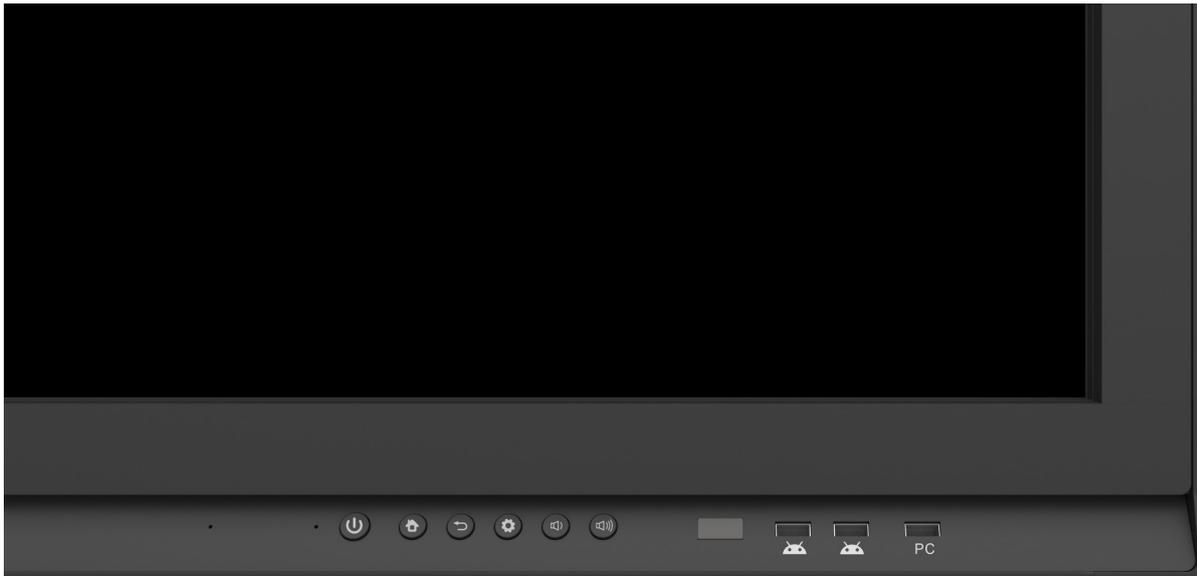


1 2 3 4 5 6 7 7 8

1	Turn on and turn off the screen. Hold for 4 seconds for standby mode and 1 second for power save mode
2	HOME button. Your screen will remember the last input channel (example HDMI 1), if you would prefer to begin on the Android you can simply press the home button when the screen comes on. Alternatively, go to settings, start up and shut down and set the default start up channel to Android
3	Back - back to previous step / menu
4	Menu - select an input source, change the picture or sound settings
5	Volume button - lower the volume
6	Volume button - volume up
7	USB ports for the Android system. view images, video, documents and save files.
8	USB port for the inbuilt PC option.


► The Android Interface

Your screen can be used without a computer. When you start the screen the Android interface is automatically launched.

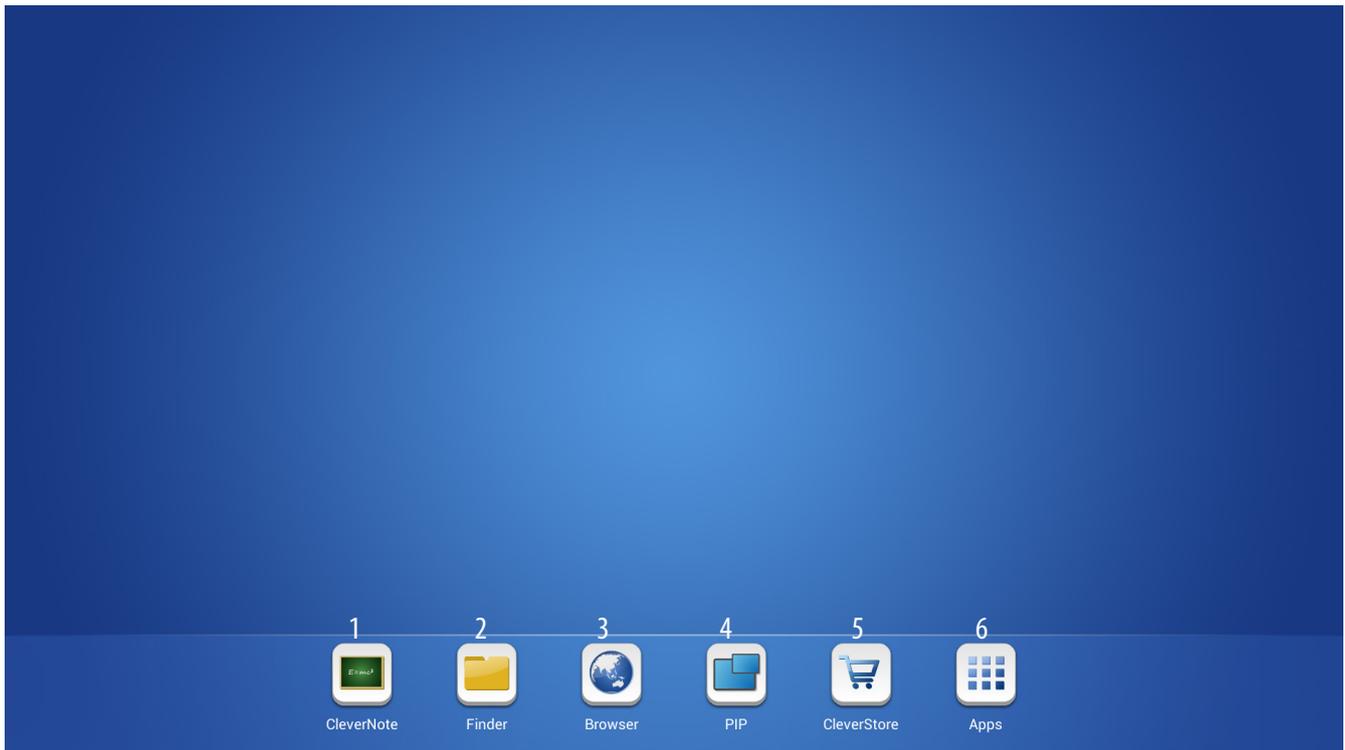

1.	Clevernote	On Screen annotation
2.	Finder	Filing system for screen
3.	Browser	Web browser
4.	PIP	Picture in picture
5.	Cleverstore	App store
6.	Apps	All installed apps.

► The Widget

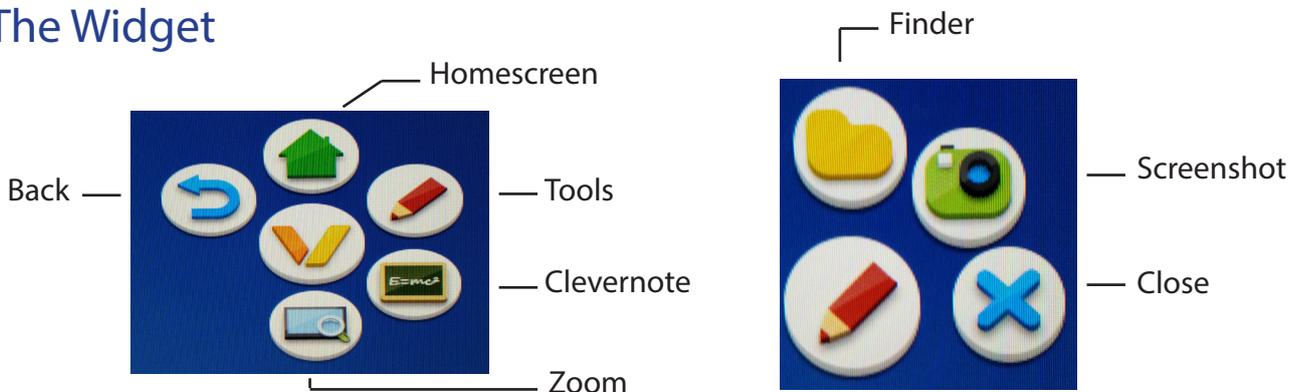

Tip: Place two fingers 2-3 cm apart on the screen and hold it for about two seconds to make the widget move to that location. When you save your notes / take screenshots, they are saved in the Clever Finder as an image.

► Clevernote

Clevernote is a simple annotation app that enables users to quickly annotate, doodle or brainstorm. All Clevernote documents are saved in a PNG or JPEG form and can be emailed from the app.




1	Menu	Save, change background colour, send an email.
2	Exit	Exit Clevernote
3	PIP (Picture in Picture)	Add PIP
4	Import Image	Import an image from USB or Internal drive
5	Select tool	Selection tool
6	Pen Tools	Select pen thickness and colour
7	Eraser	Erase content - the flat of the hand will automatically bring an erase option which allows the hand to erase any annotations on the screen
8	Undo / Redo	Undo or Redo action
9	Pages	View and select pages
10	Create a page	Add a new page

► Finder

Finder is the file browser for the Clevertouch Plus. Here you can access files stored on the internal storage or the connected USB stick.

The files can be sorted into file types. If you have images saved you can start a slide show on the screen. If you have an app that can handle, for example, PowerPoint or Word, then you can access these files in the Clever Finder.

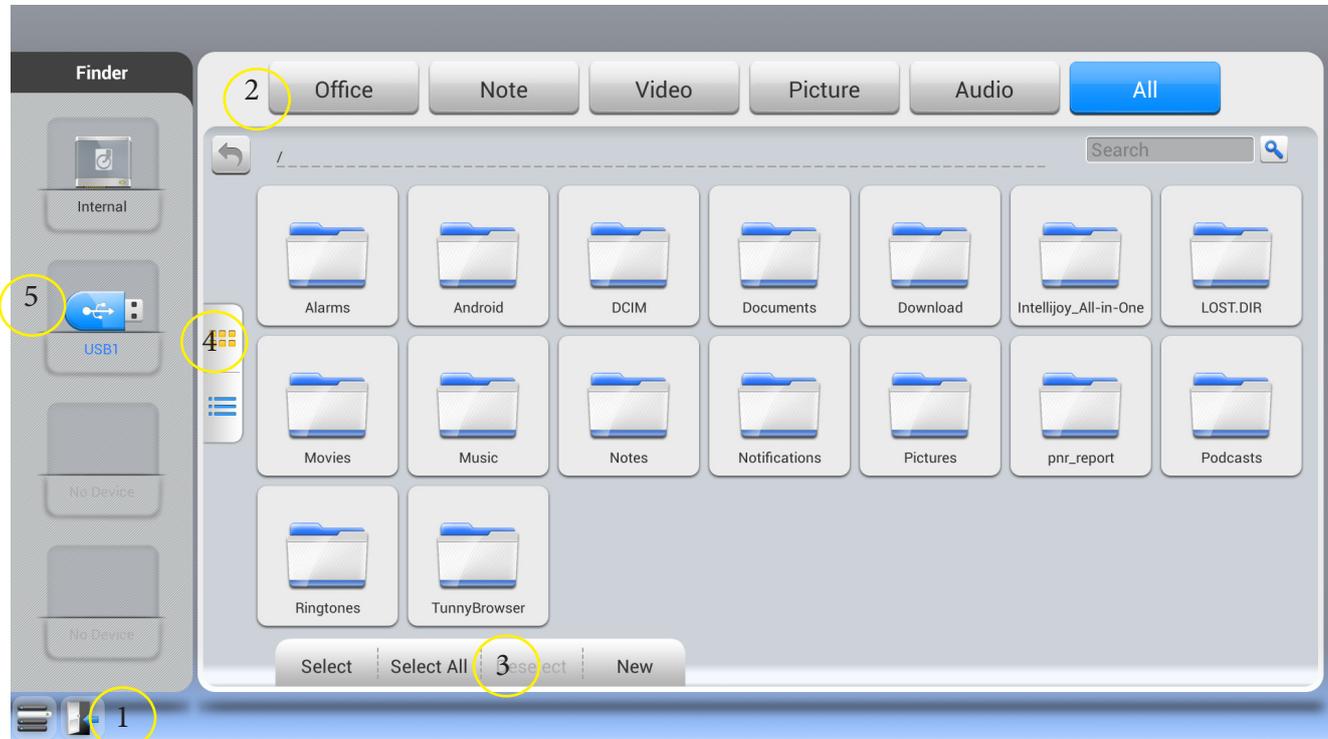

1	Exit / Quit Clever Finder
2	Sort by file types - click on picture to display all pictures on the USB memory
3	Managing files - you can copy, delete, and move files.
4	Display Files - select how you want the files to be displayed, list or icons
5	Inserted USB stick - select to access


► Browser

The Integrated web browser enables the user to visit web addresses. In the browser's settings you can add proxy information.




► Picture in Picture (PIP)

Picture in Picture enables you to display a live image from another input. This could be the built-in PC, a laptop or the Android screen if you are on PC mode.

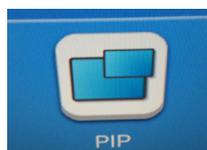

► The on screen menu

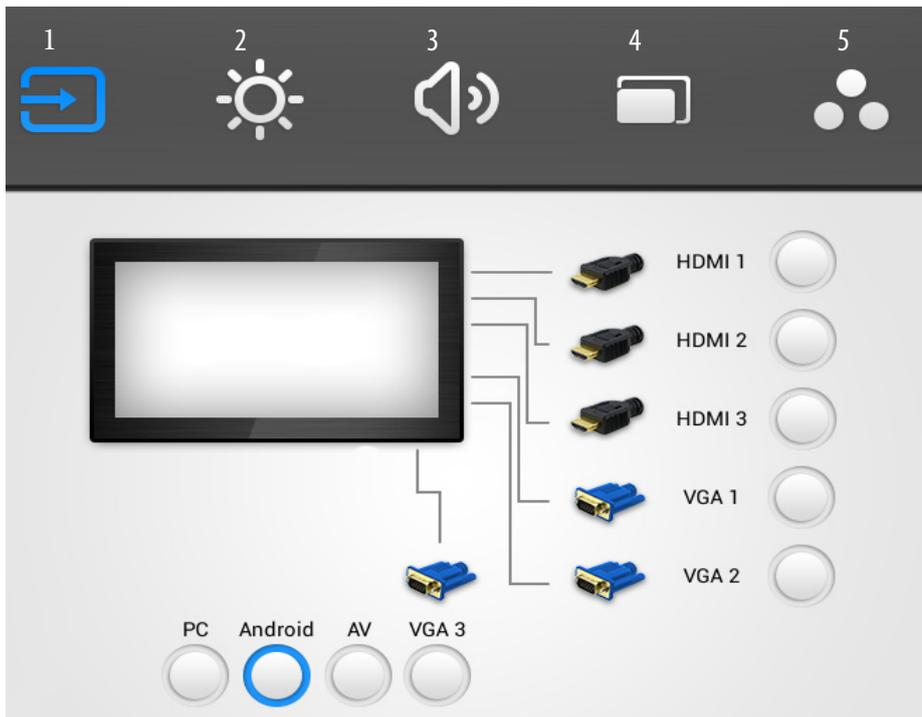

1	Input Selection
2	Brightness
3	Volume
4	Image Position
5	Advanced Screen brightness, sharpness, contrast + colour temp.


The on screen menu can be accessed by pressing the menu button on the main button panel, or can be summoned by gesture control. To open the on screen menu place one finger at the bottom of the screen in the middle and drag upwards.

From the on screen menu you can select Inputs such as Android, IPC, HDMI and VGA. Any input highlighted in yellow is the input currently selected.

More advanced settings

Select apps then settings from the home page.

Here you can hook up the screen with wifi, connect bluetooth keyboard and mouse to fine-tune the sound and display settings. Time and date are also available here. If you have installed the app for other keyboards other than English you can choose it here. Selecting apps you will find the all apps that are installed on the screen.

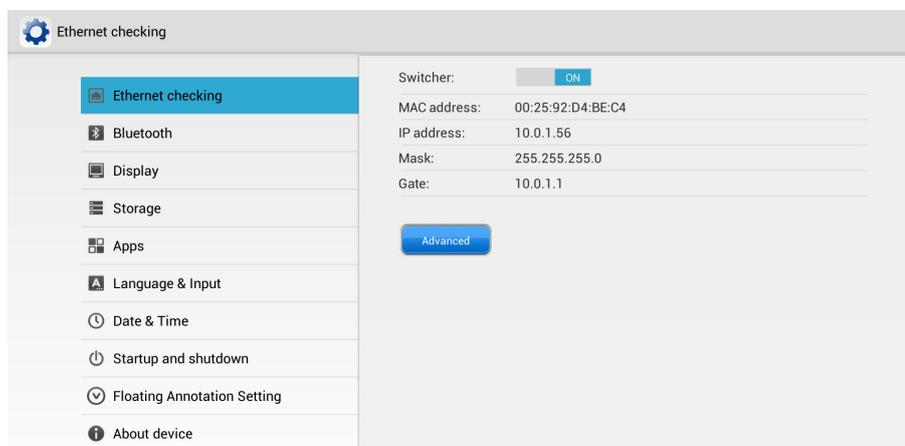

Android Settings

You can find all android system settings by using the settings icon on the apps page.

► Cleverstore

Primary School Apps



Secondary School Apps

Exclusively developed for the Clevertouch plus, Cleverstore brings the latest educational apps on screen for free! simply browse the extensive catalogue by category, find the app you want to download.

CLEVERSTORE



Maths Tutor

BEST EDUCATIONAL APP WINNER at 2014 BETT Awards: the world's largest education tech event.


Brought to you by educational publisher, Daydream Education, this FREE Maths app is a flexible learning and teaching tool that offers a wealth of interactive content and engaging assessment activities.

The colourful and visual approach to learning used throughout the app delivers a highly effective learning experience for children of all

Free

271MB




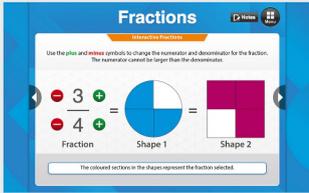




When you have selected your app you can click on its image that will take you through to where you can read about the apps features and download the app.

Once the app has downloaded you should see the below screen that will install the app onto your device.

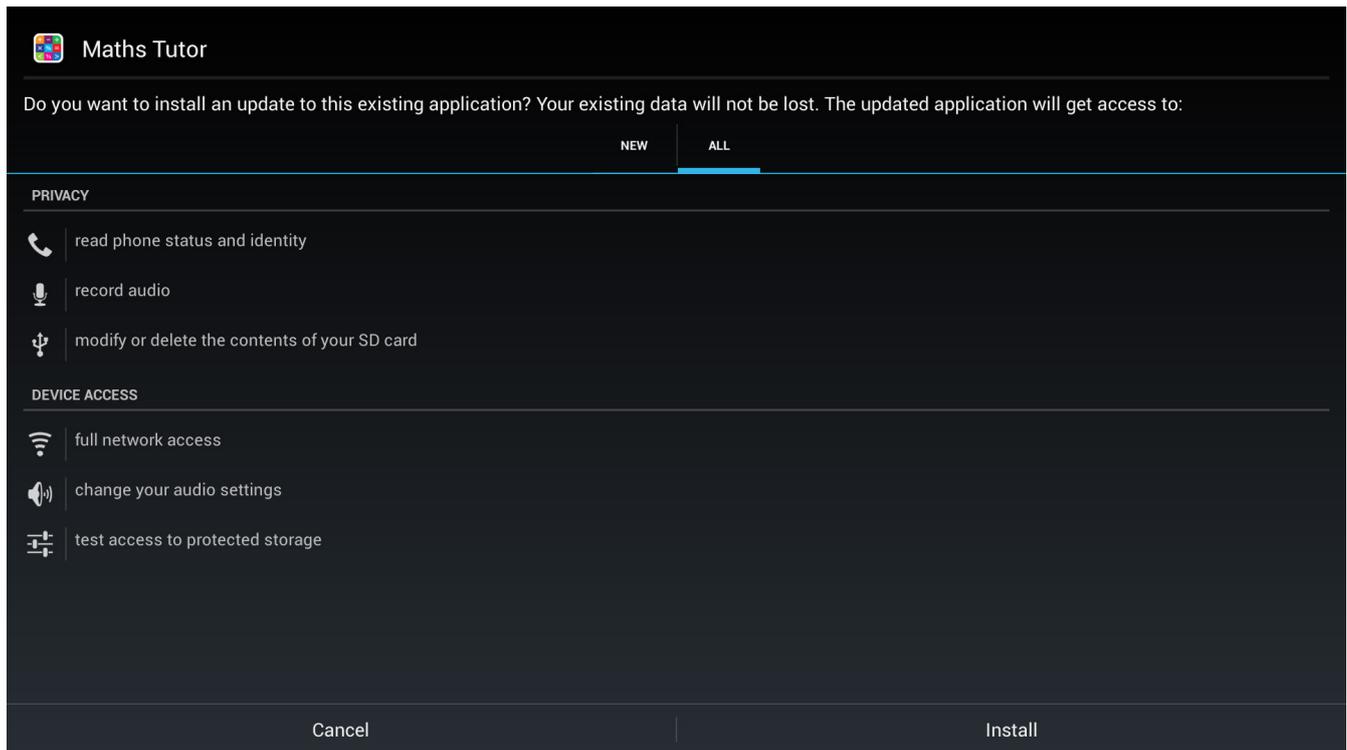

You can also launch your favorite apps from the store once they have been downloaded. just look out for the "open" icon.

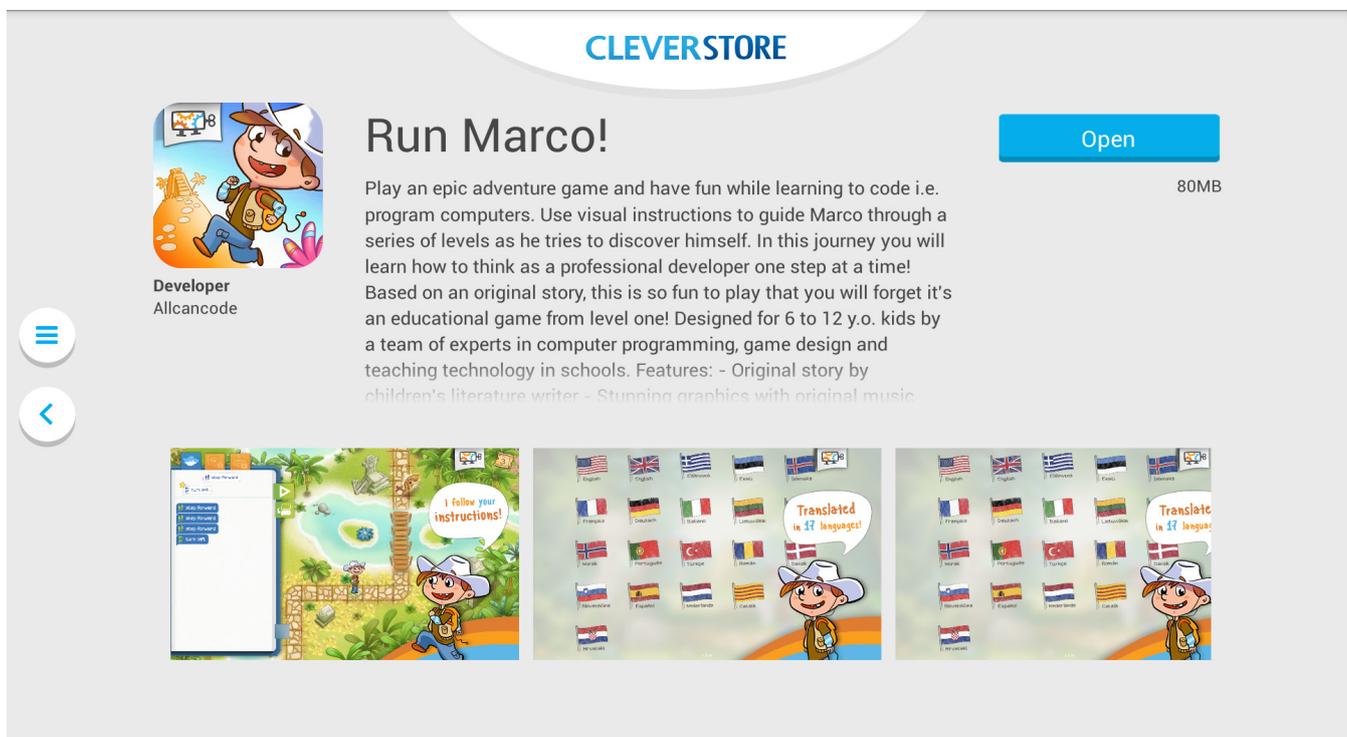

► EShare

Eshare is an app that allows you to wirelessly stream content from your phone or tablet to the Clevertouch Plus. Both devices have to be on the same wireless network for this to work.




Welcome to EShare Server
ID: EShare-3245
Download client APP from address below.
<http://10.0.1.56>

The image shows a screenshot of the EShare Server interface. At the top left is a QR code. Below it, the text reads "Welcome to EShare Server", "ID: EShare-3245", "Download client APP from address below.", and "http://10.0.1.56". In the center, there is a diagram showing a laptop, a tablet, and a smartphone on the left, connected via Wi-Fi to a central "EShare" device, which is then connected via Wi-Fi to a projector on the right. At the bottom right, there are three buttons: "Clear cache", "Document pushing mode", and "Help".

► Task Manager

Task manager can be used to close open apps that you are finished using. This is recommended to maximise the performance of your device at all times. Simply press the "Cleaner" button

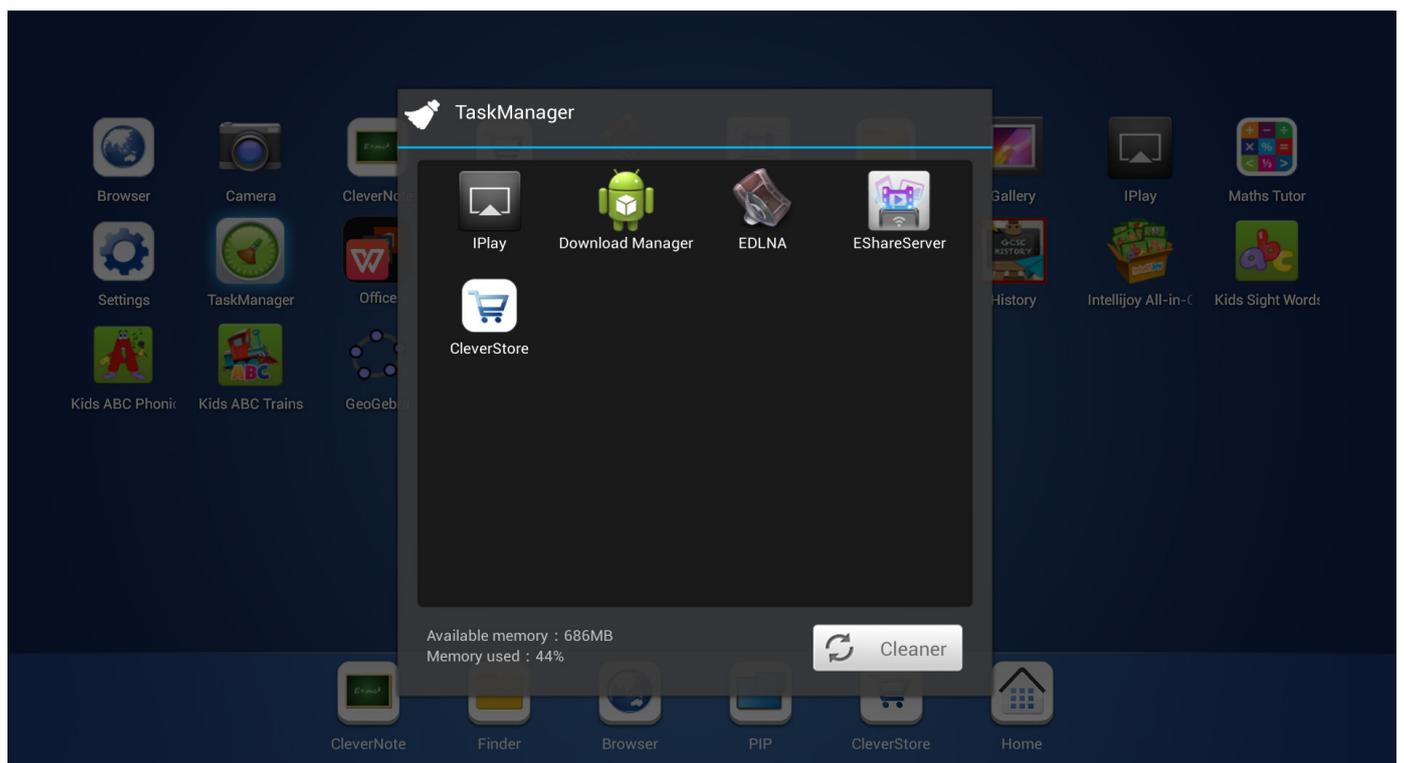

The image shows a screenshot of the Task Manager application interface. The background is a dark blue home screen with various app icons. The Task Manager window is open, displaying a list of running applications: IPlay, Download Manager, EDLNA, EShareServer, and CleverStore. At the bottom of the Task Manager window, it shows "Available memory : 686MB" and "Memory used : 44%". A "Cleaner" button with a circular arrow icon is located at the bottom right of the Task Manager window.