

Monitor User Guide

Version 3.6

- 1. Introduction**
- 2. Connecting the Monitor**
- 3. Using the Monitor**
- 4. Cleaning the screen of LCD Monitor**
- 5. Disclaimer**
- 6. Trouble Shooting**
- 7. Supplement**
- 8. Installation on Wall or Table Top**

IMPORTANT SAFETY INSTRUCTIONS

1. Please read this instructions carefully before using the product and keep it for later reference.
 2. Follow all warnings and instructions marked on the product.
 3. Unplug this product from the wall outlet before cleaning. Clean the product with a damp soft cloth. Do not use liquid or aerosol cleaners as it may cause permanent damage to the screen.
 4. Caution of use varies from model to model; please observe appropriate operation per model in use.
 5. Do not place this product on an unstable cart, stand, or surface which may cause damage or harm to the product or personnel.
 6. Slots and openings on the cabinet, in the back cover or in the bottom, are for ventilation; to ensure reliable operation and to prevent from overheating; these openings must not be blocked or covered at all time. The openings should never be placed near or over a radiator or heat register, or in a built-in installation unless proper ventilation space (min. 2 inches/ 5cm of gap) is provided.
 7. This product should be operated from the type of power indicated on the marking label. If you are not sure of the type of power available, consult your dealer or local service company.
 8. This product is equipped with a 3-wire grounding type power plug, a plug having a third (grounding) pin. This plug will only fit into a grounding-type power outlet. This is a safety feature. If you do not have proper outlet to insert the plug, contact your electrician to replace your obsolete outlet. Do not break the ground pin and defeat the purpose of the grounding.
 9. Do not allow anything to rest, or persons to walk, on the power cord..
 10. If an extension cord is used with this product, make sure that the total ampere rating plugged into the extension cord does not exceed the maximum ampere rating of the extension cord.
 11. Never thrust object/tool of any kind through cabinet slots of this product, as they may touch dangerous voltage point or short out parts that could result in risk of fire or electric shock. Never spill liquid of any kind on the product (except IP-rated models).
 12. Do not attempt to service this product yourself; always refer to qualified or authorized personnel for servicing this product.
 13. Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:
 - When the power cord or plug is damaged or frayed or broken.
 - In case that liquid has been spilled into the product (excepting IP-rate models).
- In case the product does not operate normally when the operating instructions are followed, adjust only those controls that are delineated by the operating instructions.
14. Caution: When fixed patterns are displayed for a long time, remnant image (retention) is likely to occur.

1. Introduction

1-1 About the Product

The monitor consists of a (LED/ TFT) LCD panel and microprocessor -controlled main board. It is designed to meet the demanding or rigid performance requirements of education/schools, public premises, corporate, and industrial applications.

GENERAL FUNCTION

- Display type: TFT-LCD MODULE DRIVE BOARD
- RESOLUTION: UP TO 1920X1080 with a 16:9 ASPECT RATIO @60Hz
- AUDIO/ VIDEO SIGNAL CONNECTIONS
 - SOURCE INPUT:
 - HDMI 1
 - HDMI 2
 - HDMI 3
 - VGA
 - SOURCE OUTPUT:
 - VGA(sometimes called “Pass Through” or” Loop Through”)
 - HDMI(For HDMI 1, HDMI 2 and HDMI 3)
- DATA CONNECTIONS
 - USB A1 (A type)/ USB player, support formats listed in section 3-5-2
 - USB A2 (A type)/ USB Player, support formats listed in section 3-5-2
 - USB B1 (B type)/ only for connection touch control data to a user PC
 - USB B2 (B type)/ only for connection touch control data to a user PC
- RS232 CONTROL input
- AMBIENT LIGHT DETECT: to see detail in section 3-4(Option: Light Sensor)
- FREEZE: Freeze current picture on screen. (Freeze works with under source VGA/ HDMI. Under source USB1/ USB2, please press  on handheld remote control to pause the picture)
- Aspect Ratio

1-2 Notice

1. Do not apply any sharp object on the original LCD panel surface, if model is without protective glass.
2. Do not use corrosive or abrasive detergents, waxes or solvents for cleaning. Use only a dry or damp with clean water, soft cloth when cleaning.
3. Use qualified and safety-approved AC power cord only.

1-3 Check List

When opening the carton, please make sure that all the items listed below are present:

1. VGA cable (male-to-male) ×1
 2. Power cord ×1
 3. USB cable ×1 (for touch monitor models only)
 4. HDMI cable x1
 5. Audio cable 3.5E x1
 6. User guide ×1 (e-file in CD and specific driver).
 7. Remote control x 1, battery included.
 8. Cleaning fabric x2
 9. Stylus x2
 10. Wall mount installation guide x1
- If any items are missing or damaged, please contact your local dealer immediately.

Following items are optional at specific ordering:

11. VGA cable (male-to-male) (optional) for VGA out application

Adapter/Converter Advisory

Should specific adapter/converter is required, i.e. tablet PCs, in order to connect to this monitor, please use original adapter/converter recommended by the original brand. The length of cables should not be longer than 2 meters each.

2. Connecting the Monitor

The procedures for setting up your Monitor kit is as followed:

2-1 Power & Signal Connections

2-1. Power cord connection:

Connect the power cord to the AC outlet.

2-2. Power on:

Switch on the main power of your monitor (switch is located next to the AC outlet)

2-3. Input Source VGA (HDMI1/ HDMI2/ HDMI3) Signal cable connection:

Plug one end of the 15-pin signal cable to the video signal connector at the rear of the PC/laptop system (or engine box) and the other end to the monitor.

Or plug one end of the HDMI signal cable to signal source (PC, laptop, IPC, media player of any kind with proper HDMI or other out port), and the other end to the HDMI connector on the monitor.

Tighten the connector screws on both ends of the cable to secure good signal connection.

2-4. VGA/ HDMI output connection (Optional male to male VGA/ HDMI cable):

Plug one end of the VGA/ HDMI signal cable to signal source and the other end to another VGA/ HDMI in connector to daisy-chain, of cascading, signal to the other monitor.

Tighten the connector screws on both ends of the cable to secure good signal connection.

2-5. USB cable connection (for touch monitor models):

Plug one end of the USB (B type) cable to the USB (A type) connector at the rear of the (PC, or, IPC, or, media player), and the other end to the USB connector on monitor.


There are two USB (B type) connectors, one for dynamic source (VGA/ HDMI1/ HDMI2) on rear, the other for HDMI3 on side.

Please connect the signal source first, then follow by connecting USB cable for touch.

3. Using the Monitor

3-1 Get to know the monitor


The Monitor connectors are located on the rear side. They are shown in the physical monitor as figure below and described in the following paragraphs. Please note that connectors may vary in some derivative models; please refer to individual leaflet for special notation.

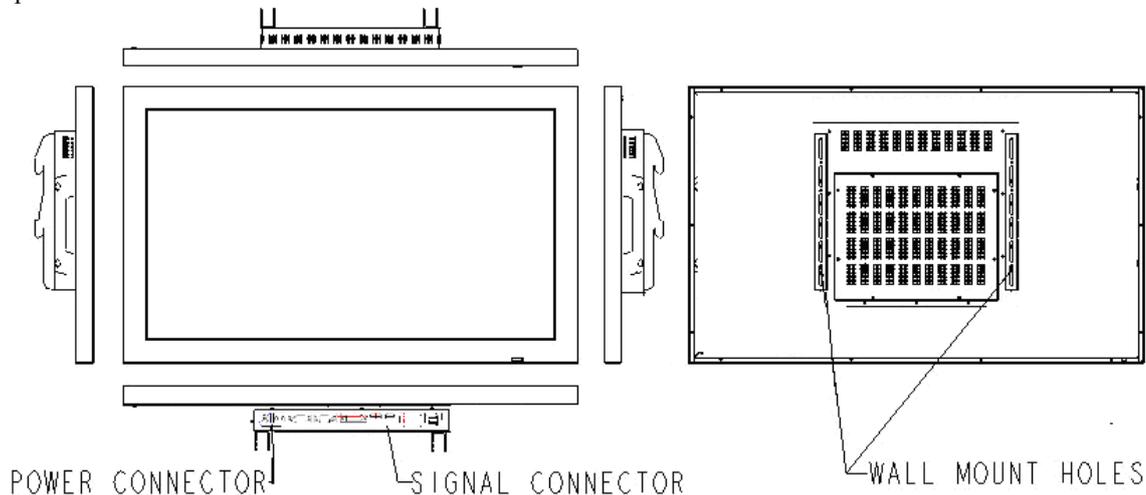


3-2 Connector ports

The Figure below depicts the signal connectors on the main board.


Rear

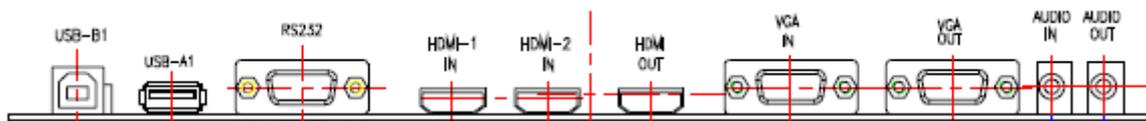

Side (EZ connect)

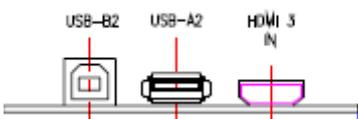


3-3 Keypad

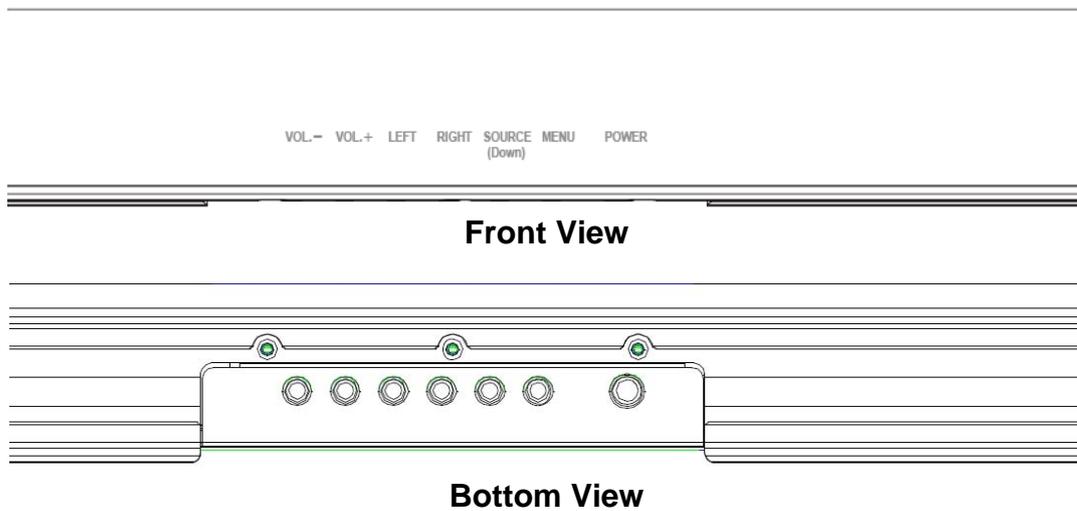

Note: Left = Enter/Select -> under source USB1 or USB2, this key is defined as Select

3-3-1 Remote Control

The outlook of remote control is shown in the Figure, hereafter,

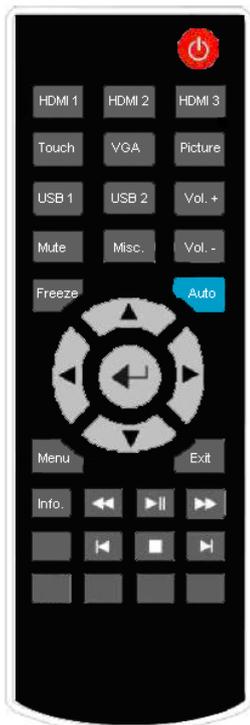

Size: 197.2 x 47.1 x 23.2mm (7.7 x 1.85 x 0.9 x in.)

Operation distance: > 10 meter (32ft.)

Working angle: not more then +/- 40 degree

CAUTION
RISK OF EXPLOSION IF BATTERY IS REPLACED
BY AN INCORRECT TYPE
DISPOSE OF USED BATTERIES ACCORDING
TO THE INSTRUCTION

Product specification subject to change without prior notice.

3-4 Understanding the OSD Menu (with Remote control)

a. Power

Press the power button to turn on/off the monitor.

b. HDMI 1

Press this button to select the HDMI 1 signal source.

c. HDMI 2

Press this button to select the HDMI 2 signal source.

d. HDMI 3

Press this button to select the HDMI 3 signal source.

e. Touch

Press the Touch to turn ON/OFF Touch function

f. VGA

Press this button to select the VGA signal source. Source default is at VGA source.

g. Picture

Press the Picture to select Zoom mode.

h. USB 1

Press this button to select the USB 1 signal source.

i. USB 2

Press this button to select the USB 2 signal source.

j. Vol.+ / Vol.-

Press Vol.+ / Vol- to adjust Volume UP / DOWN.

k. Mute

Press this button to mute or un-mute.

l. Misc.

Reserved

m. Freeze

Press this button to Freeze picture on screen.

n. Auto

Press this button to auto-adjust and optimize picture screen of the monitor.

o. Select function for adjustment

Press the (▲/▼/Enter) button to scroll up and down the intended function items for adjustment, and then press the Enter button to activate that function item.

p. Menu

Press the Menu button to go into OSD menu.

q. Exit

Press Exit button to exit setting, or, exit OSD menu. Alternatively, press “Menu” button to exit the OSD Menu instantly at any time.

r. Info.

Press to show timing and resolution

s. USB Function

Press       to control USB function.

3-4 Content of OSD Menu

Picture // press  /  (UP/Down) to select sub menu, press  /  to next page(Sound/

- Picture mode
 - Contrast
 - Brightness
 - Color
 - Sharpness
 - Tint
- Color Temperature
 - Standard
 - Cool
 - Medium
 - Warm
- Aspect Ratio
- Noise reduction
- PC Setup
 - Auto Adjust
- Backlight

Sound

- Sound mode
 - User
 - Treble
 - Bass
 - Standard
 - Music
 - Movie
 - Sports
- Balance
- Auto Volume (Auto Gain Control)
 - Volume up
 - Volume down

Option

- OSD Language
 - English
 - Français
 - Español
 - Português
 - Arabic
 - 中文(Simple)
- Restore Factory Default

- Blending (OSD transparency)
- Light Sensor ON/ OFF (When this function has been turned ON, the Monitor will automatically adjust back light (Luminance). Adjusting the luminance automatically has three stages. The light sensor is located with IR sensor.)
- Auto Detect ON/ OFF (When this function has been turned ON, the Monitor will automatically seeking signal form input sources (status standby mode).
- OSD Duration
 - OFF
 - 5 sec.
 - 10 sec.
 - 15 sec.

3-5 USB

3-5-1 USB F/W Update (please call technical support)

3-5-2 USB Player Support Format

Video (1080p)	Audio	Image	TXT
MP4	MP3	JPEG	TXT
RMVB/RM	AAC	BMP	
MOV	WMA	PNG	
MPEG2	M4A		
MPEG1			

Note: It will take a while to load data from your USB (USB Hard Drive). The more data in the hard disk are, time is the longer if read.
 Note: When video comes out only picture without audio, it could be audio format doesn't support or over range of audio bit rate.
 Note: The Keypad doesn't support full function of USB menu. Please to use remote control.

3-6 RS232 Command

3-6-1 Introduction

This document is the communication protocol between the Monitor and PC Via RS232.

3-6-2 Data format

Data will be transferred serially according to RS232 protocol using the following settings.

Female DB9 DCE pin numbering and definitions: recommended communication rates are: (higher baud rates are fine but 9600 is by far the most common and is sufficient for the volume of data being transmitted)

Baud Rates	9600
Data Bits	8
Stop Bits	1
Parity	No

3-6-3 Data structure

Note – All numbers shown in the protocol description are in string unless indicated otherwise. Percentages are shown in decimal.

General Command Form

- STX. The first character is the standard Start of Text (STX) character 'S'.
- Address. The second character is the device address. If a device does not support addressing, these should be 0 and 9 to act as the global address.
- Type. The third character is the command type. There are four types of commands:
 - o Command 0
 - o Ack 1
 - o Nak 2 (option)
 - o Notification 3 (option)
- Property ID. The four and fifth characters are the property identifier. By using one byte we have 256
- Data Length. The sixth character is the number of characters in the parameter data section.
- Data. Following the sixth character is the parameter data section that is as many characters long as the sixth character indicates. If the sixth character is 00 (as with the Reset command for example) then there are no characters in the parameter section. This parameter section contains the value (hexadecimal) for the property.
- ETX. The last character is the standard End of Text (ETX) 'EN'.

Sample:

STX	Address	Type	Property ID		Length	Data	ETX
S	0	0	0	1	1	1	EN

In this example (Power On to everything), the Address character 0, which is the global address for all devices connected to the serial port. The Type character is 0 to indicate the transmission is a command. The Property ID characters indicate a property identifier of 1, which in this protocol is the value for power. The Length character is a 1, which indicates that there is one character of data associated with this command. The Data has a value of 1, which is the value for ON. The ETX is command End code.

3-6-4 Command code

3-6-4-1 User Command

In the following samples, the global device address of 0 is used.

The numbers in brackets are the string value that has associated with the property or the property value.

Note that these values are used in the command string.

For the properties that support ranges such as brightness and volume, examples are provided for low, and high. Any intervening values can be deduced from these.

This section only covers the commands sent from the computer to the device. For responses from the device, see sections 3-6-4-2 – ACKs/ Notifications

Command		1	3	4	5	6	7	8	9	Note
Power	OFF	S	0	0	0	1	1	0	EN	
	ON							1		
Input Source	VGA	S	0	0	0	2	1	0	EN	
	HDMI 1							1		
	HDMI 2							2		
	HDMI 3							3		
	USB 1							4		
	USB 2							5		
Brightness	0%	S	0	0	0	3	2	00	EN	
	100%							64		
	Plus							65		
	Minus							66		
Contrast	0%	S	0	0	0	4	2	00	EN	
	100%							64		
	Plus							65		
	Minus							66		
Clock	0%	S	0	0	0	5	2	00	EN	
	100%							64		
Phase	0%	S	0	0	0	6	2	00	EN	
	100%							64		
Sharpness	0	S	0	0	0	7	2	00	EN	
	100%							64		
Horizontal Position	Minus	S	0	0	0	8	1	0	EN	
	Plus							1		
Vertical Position	Minus	S	0	0	0	9	1	0	EN	
	Plus							1		
OSD Time	5secs	S	0	0	0	C	1	0	EN	5secs, 10secs, 15secs, Never
	Never							3		

Color Temperature		S	0	0	1	0	1	0	EN	
								4		
Language		S	0	0	1	1	1	0	EN	
								5		
Volume	0%	S	0	0	1	2	2	00	EN	
	100%							64		
	Plus							65		
	Minus							66		
Mute	OFF	S	0	0	1	3	1	0	EN	
	ON							1		
Zoom(Aspect Ratio)		S	0	0	1	4	0		EN	
Touch	OFF	S	0	0	1	6	1	0	EN	
	ON							1		
Freeze	OFF	S	0	0	1	7	0		EN	
	ON									
Auto Color		S	0	0	2	0	0		EN	
Auto Processing		S	0	0	2	1	0		EN	
Auto Ambient Light	OFF	S	0	0	2	2	1	00	EN	
	ON							01		
Auto Notification	OFF	S	0	0	2	3	1	00	EN	
	ON							01		
Serial Exclusive	OFF	S	0	0	3	0	1	0	EN	
	ON							1		
On Screen Menu		S	0	0	3	1	0		EN	
Monitor ID		S	0	0	F	F	1	0	EN	
								F		
Ping		S	1	0	5	0	0		EN	Note *
Query		S	1	0	5	1	2	00	EN	Note *, Note **
								FF		
Reset		S	0	0	F	0	0		EN	
Factory Mode		S	0	0	F	1	0		EN	
Engineer Mode		S	0	0	F	2	2	0	EN	
								FF		

Note * the system doesn't allow to "Ping/ Query/ Bulk Query" more than one device at one time.

Note ** if your system need "Query" function, please contact engineer. It's a standard function.

4. Cleaning the Monitor

1. Make sure the monitor is turned off.
2. Never spray or pour any liquid directly onto the screen or case (depends on different model).
3. Do not use chemical solvents, alcohol, or any other based to clean the unit or panel. It may cause permanent damage on the unit or panel.
4. Use a clean, soft, lint-free cloth, or apply a small amount of non-ammonia, non-alcohol based glass cleanser to achieve maximum cleaning.

5. Disclaimer

The manufacturer assumes no responsibility, and will not be liable of any damage resulting from non-conforming safety actions or operation, or, cleaning on this product.

The standard of all panels would be followed by the ISO 13406-2 Class II.

6. Trouble Shooting

Before calling for service, please try following easy and simple steps to verify:

Symptom	Check Point
1. No picture	<ul style="list-style-type: none"><input type="checkbox"/> Check if the signal cable is firmly seated in the socket.<input type="checkbox"/> Check if the Power is ON at the computer<input type="checkbox"/> Check if the brightness control is at the appropriate position, not at the minimum.<input type="checkbox"/> State the monitor is powered on and the LED of power is GREEN, plug out the VGA cable and plug in again.
2. The screen is not synchronized	<ul style="list-style-type: none"><input type="checkbox"/> Check the LED light if it indicates in red, the device is in power off status. Use the remote and press "Power" to turn the power on.<input type="checkbox"/> Use the "Auto" key on remote control to automatically adjust the monitor timing scan.<input type="checkbox"/> Check if the signal cable is firmly seated in the socket.<input type="checkbox"/> Make sure the signal timings of the computer system are within the specification of the monitor.<input type="checkbox"/> If your computer was working with a CRT monitor, you should check the current signal timing and turn off your computer before you connect the VGA Cable to this monitor.
3. The picture is not centered	<ul style="list-style-type: none"><input type="checkbox"/> Adjust the H-position, and V-position, or perform the Auto adjustment.
4. The screen is flickering	<ul style="list-style-type: none"><input type="checkbox"/> Press the "Auto" - adjustment control by remote control or OSD to adjust. <p>Re-locate nearby devices, such as motor, or transformer, which generate magnetic field, away from the monitor. Check if the specific voltage is applied.</p> <ul style="list-style-type: none"><input type="checkbox"/> Check if the signal timing of signal source (PC, IPC, laptop or media player) is within the specification of monitor. If you are unable to correct the fault by following this chart, stop using your monitor and contact your distributor or dealer for further assistance.

※ Should all above trouble-shooting measure fails, please write down the S/N, Serial Number, which is located on the left-side of the monitor, and provide that S/N to the service personnel, this will help processing or further diagnosis easier.

7. Supplement

This Monitor is designed to meet following VESA standard resolution and timing per two different types of panel's native resolution.

Analog Timing			
1	640x480	60	31.5
2	640x480	72	37.9
3	640x480	75	37.5
4	800x600	56	35.1
5	800x600	60	37.9
6	800x600	72	48.1
7	800x600	75	46.9
8	1024x768	60	48.4
9	1024x768	70	56.5
10	1024x768	75	60
11	1280x768	60	47.4
12	1280x768	75	60.3
13	1280x960	60	60
14	1280x1024	60	64
15	1280x1024	75	80
16	1440x900	60	55.5
17	1440x900	75	70.6
18	1600x1200	60	75
19	1600x1200	65	81.3
20	1600x1200	70	87.5
21	1600x1200	75	93.8
22	1680x1050	60	64.7
23	1680x1050	75	82.3
24	1920x1080	60	67.2

Digital Timing	
1	480i60
2	480p60
3	576p50
4	576i50
5	720p60
6	720i60
7	1080i50
8	1080i60
9	1080p50
10	1080p60

Timing modes exceeding above chart may show abnormal, off-center, inproportionate, picture on the screen, or even "No Signal" as such timing mode maybe completely undisplayable, please refer to graphic card output timing mode respectively.

8. Installation on Wall or Table Top (Optional Wall Mounts, Table Stands except 32" stand)


I、32" Wall mount Installation guide

Step 1 : Choose the siding appropriate for mounting.

*The thickness of siding is 5 cm at least or above.

*Please confirm the material and strength of the wall is appropriate to mounting.


* Use the expansion bolts (B) to fix the hanging bracket (A) on the wall.

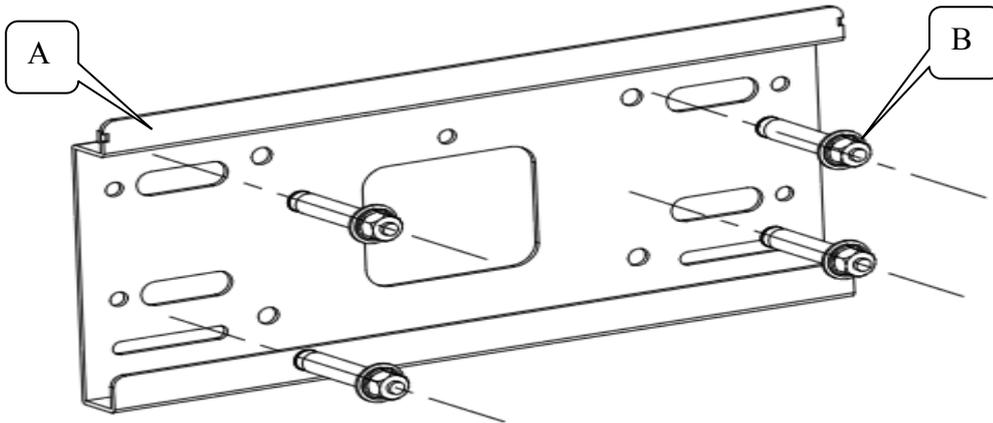

Step 2 : Mounting the hanging plate (C) on the display.

* Please power off the display between mounting.

* Use screw to fix the hanging plate (C) on the display.

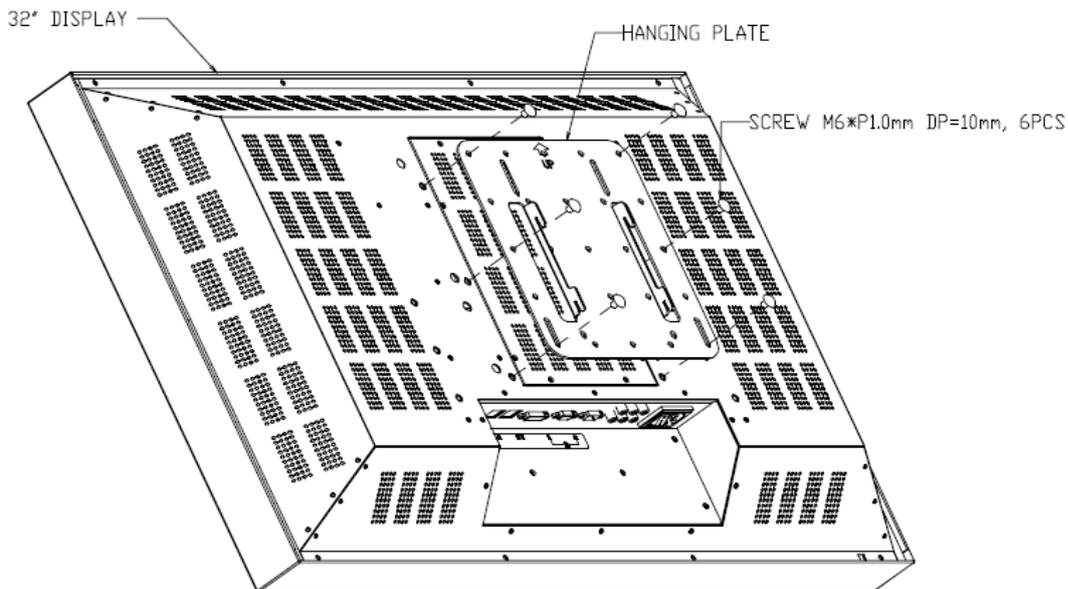


Step 3 : Suspend the display on the hanging bracket.

* Two adult prop up the display.

* Put down the display slow on the hanging bracket.

* Please confirm the hook with hanging plate to be joined on the hanging bracket.

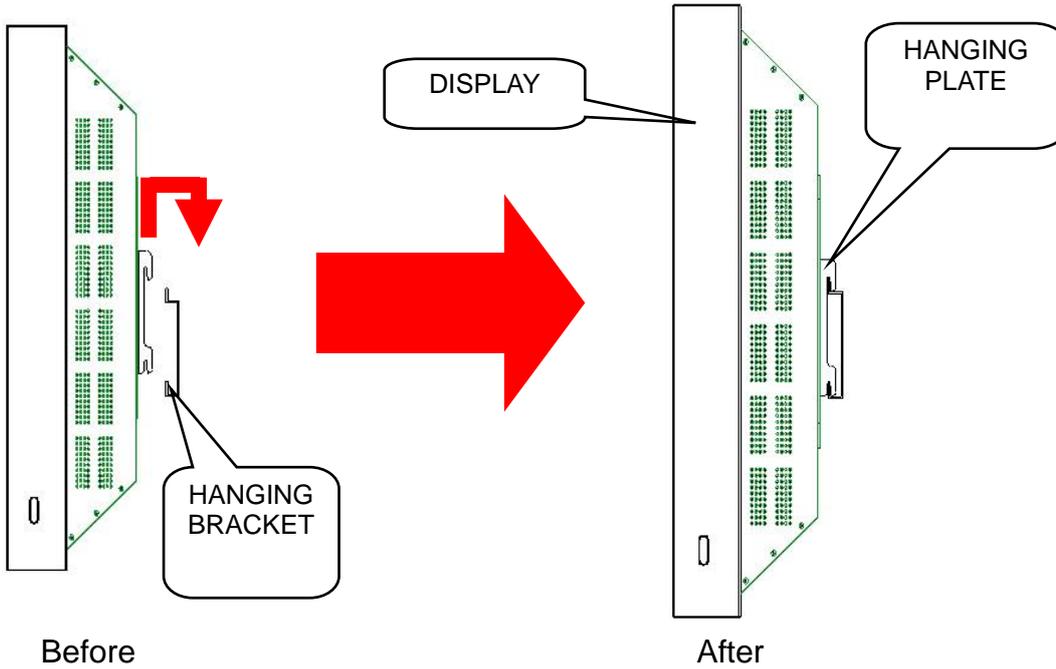


II、42”~ 55” Wall mount Installation guide

Step 1 : Choose the siding appropriate for mounting.

*The thickness of siding is 5 cm at least or above.

*Please confirm the material and strength of the wall is appropriate to mounting.


* Use the expansion bolts (B) to fix the hanging bracket (A) on the wall.

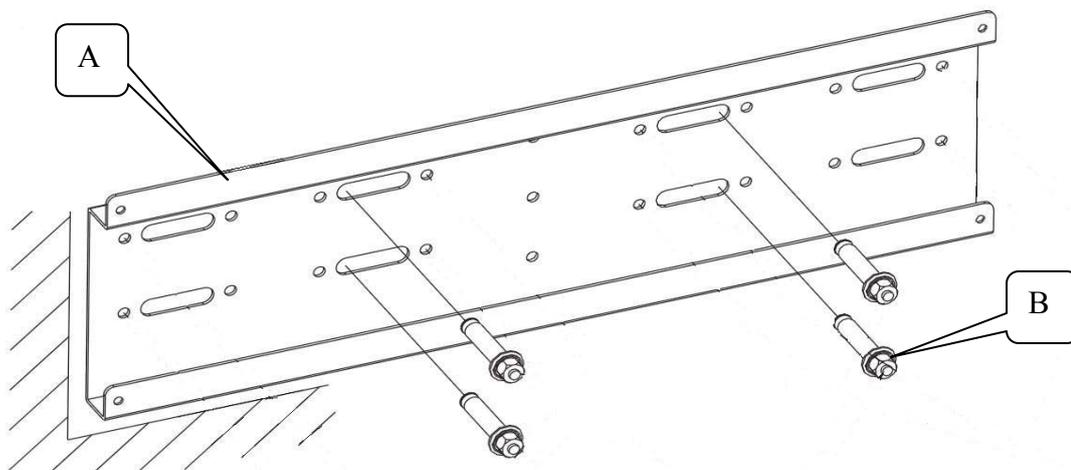

Step 2 : Mounting the hanging plate (C) on the display.


* Please power off the display between mounting.

* Use screw to fix the hanging plate (C) on the display.

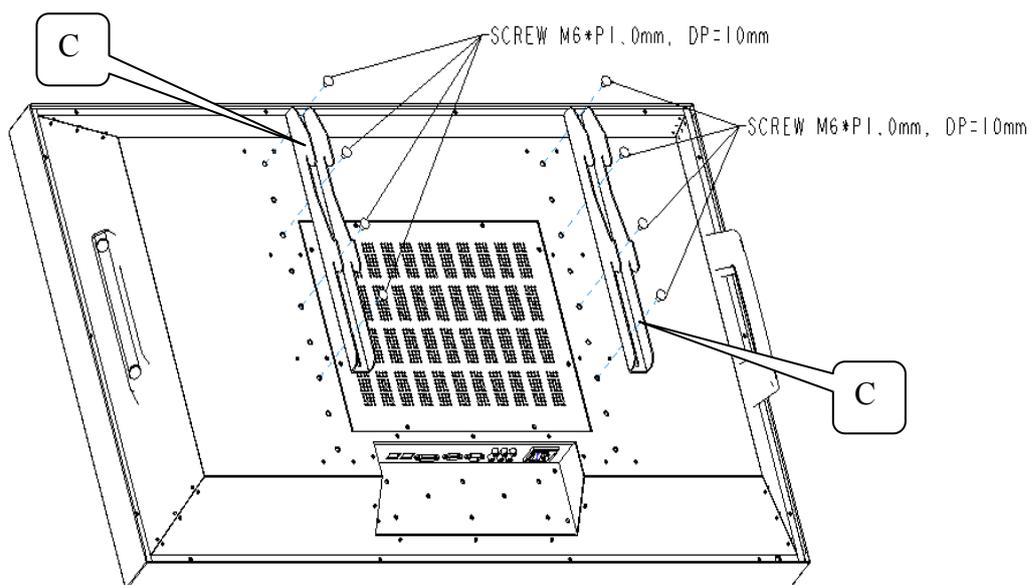

Step 3 : Suspend the display on the hanging bracket.

- * Two adult prop up the display.
- * Put down the display slow on the hanging bracket.
- * Please confirm the hook with hanging plate to be joined on the hanging bracket.

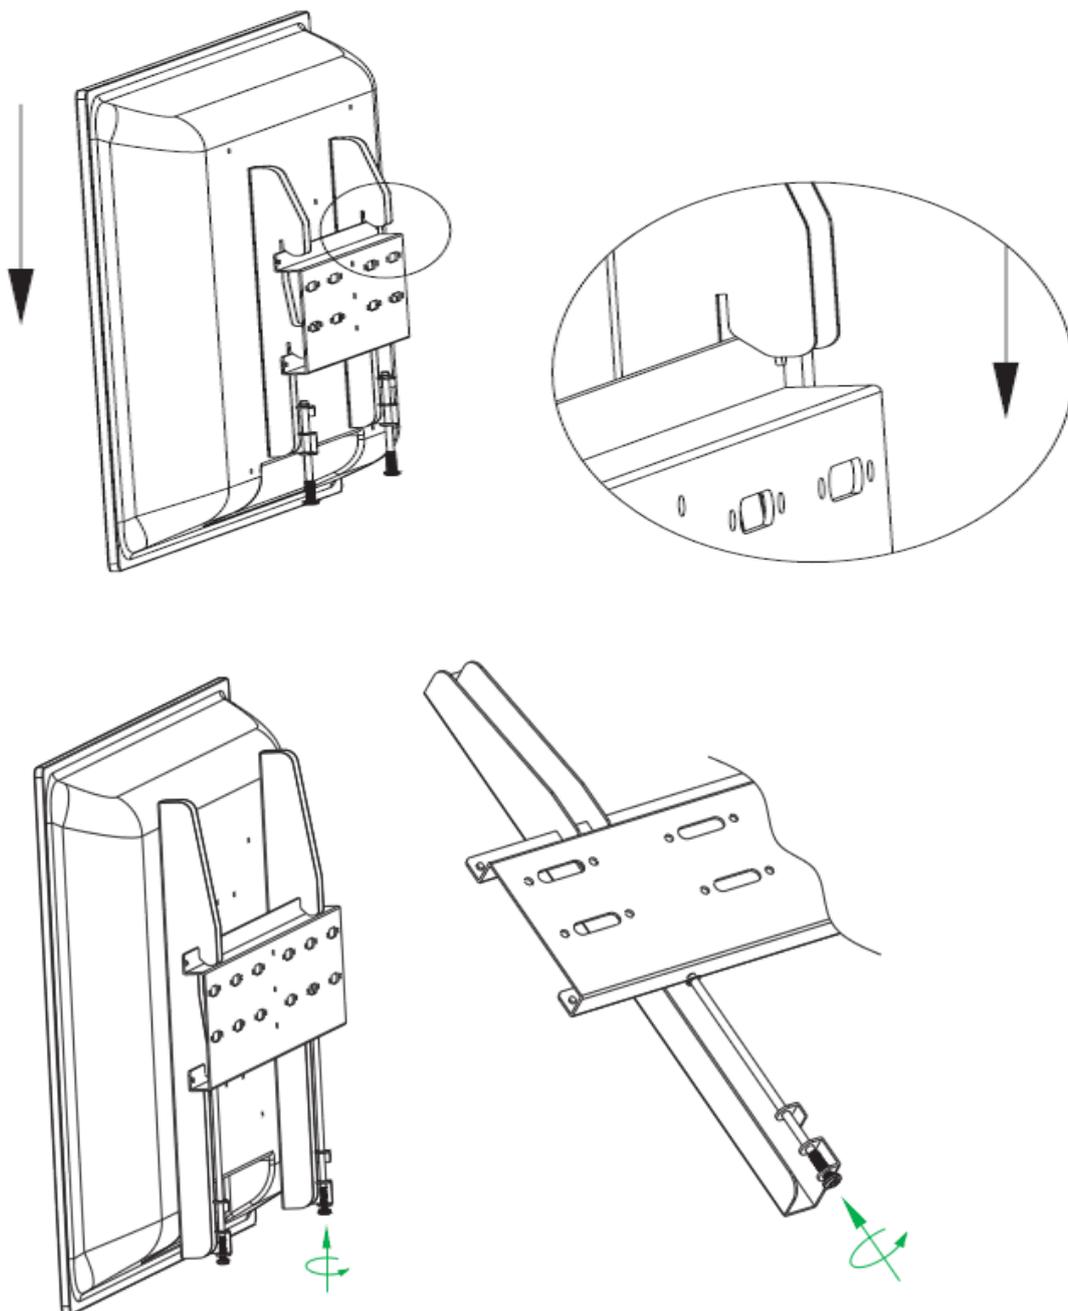


III 、 65”~ 84” Wall mount Installation guide

Step 1 : Choose the siding appropriate for mounting.

*The thickness of siding is 5 cm at least or above.

*Please confirm the material and strength of the wall is appropriate to mounting.


* Use the expansion bolts (B) to fix the hanging bracket (A) on the wall.

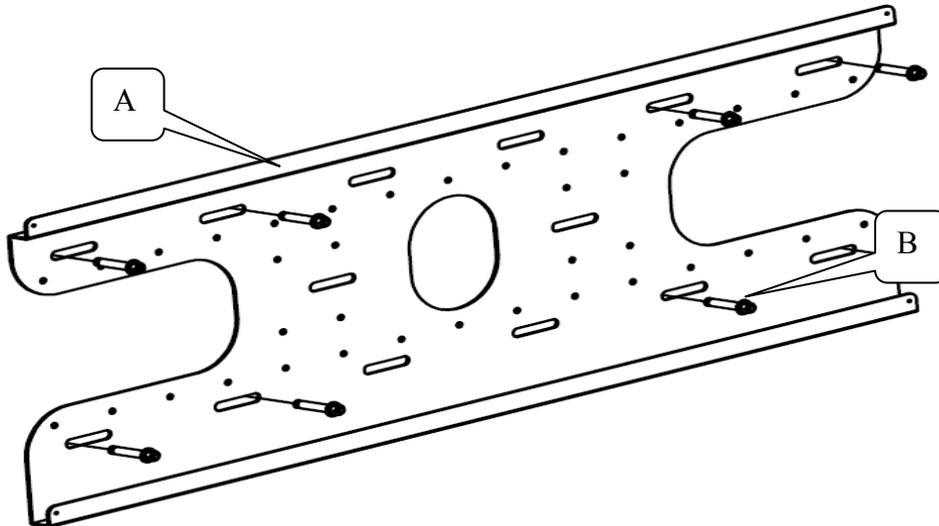

Step 2 : Mounting the hanging plate (C) on the display.


* Please power off the display between mounting.

* Use screw to fix the hanging plate (C) on the display.

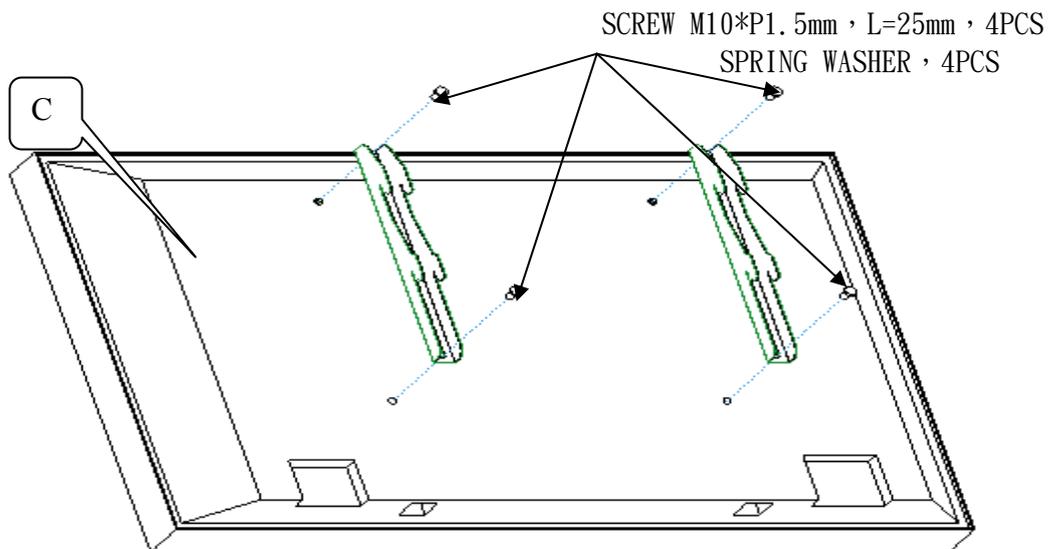

Step 3 : Suspend the display on the hanging bracket.


- * Two adult prop up the display.
- * Put down the display slow on the hanging bracket.
- * Please confirm the hook with hanging plate to be joined on the hanging bracket.

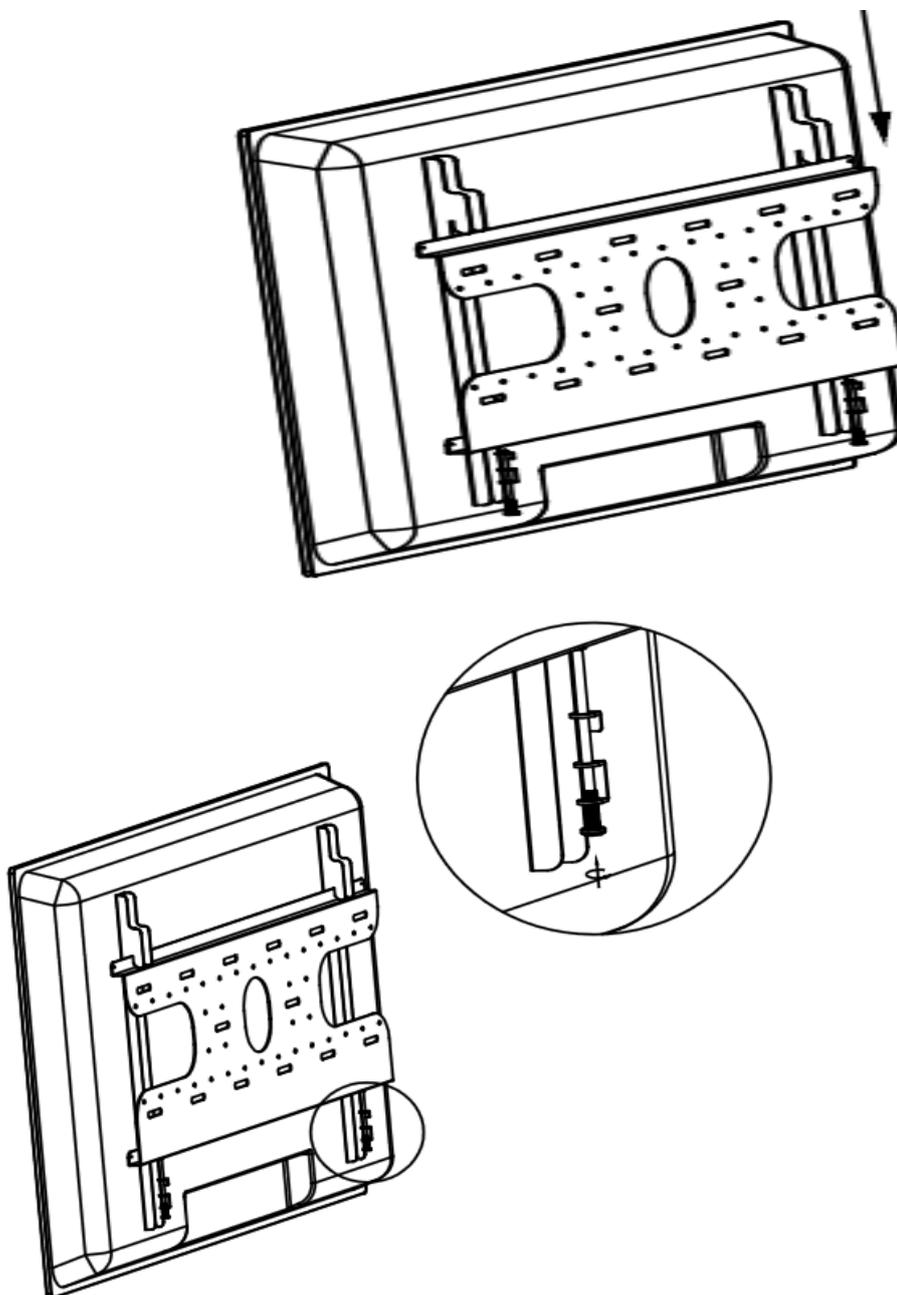

IV、32” Stand Installation guide


Step 1 : Open the package and to take out the stand.

*Check the parts and that amount, please see the bellow picture.

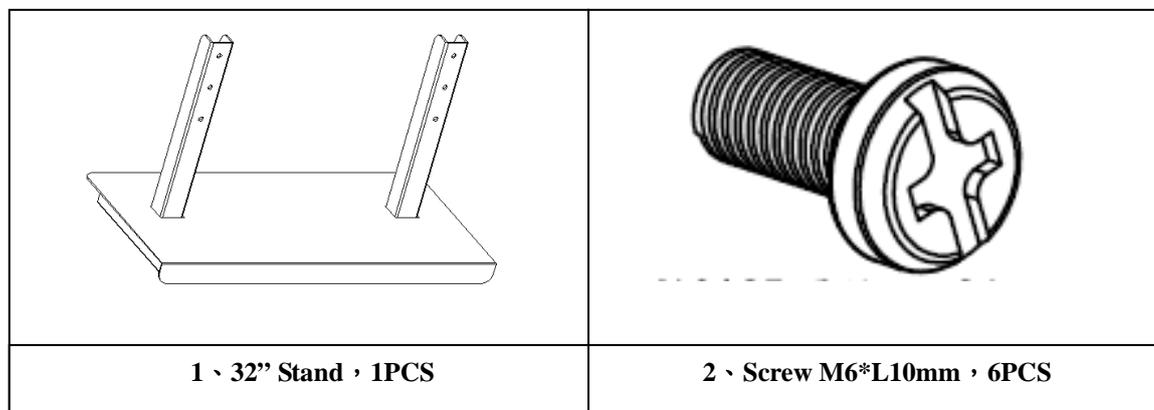

Step 2 : Mounting the display (A) on the stand.



*Use screw (B) to fix the display on the stand (C) .

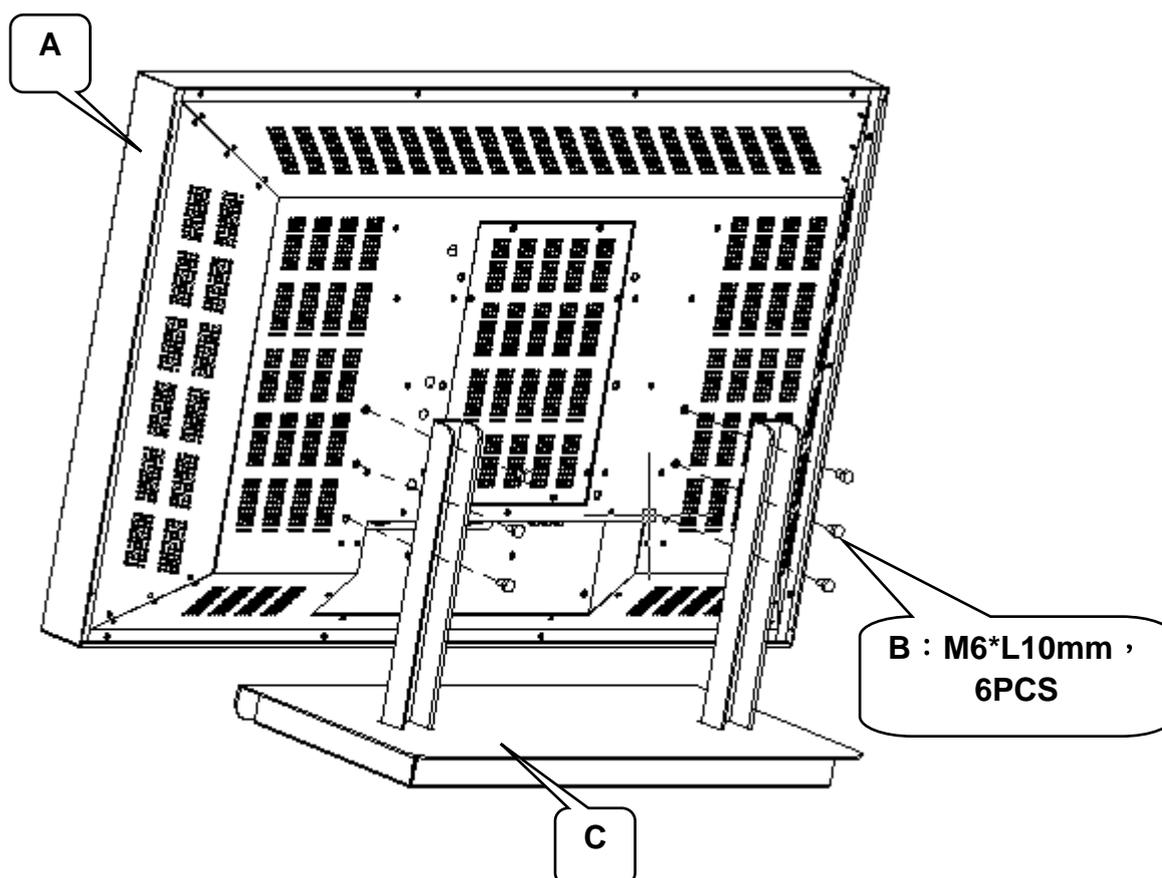

V、42”~ 55” Stand Installation guide


Step 1 : Open the package and to take out the stand.

*Check the parts and that amount, please see the bellow picture.

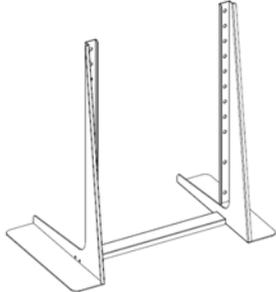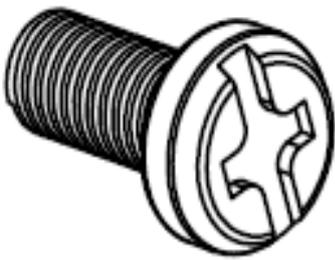	
<p>1、Stand、1PCS</p>	<p>2、Screw M6*L15mm、4PCS</p>

Step 2 : Mounting the display (A) on the stand.



*Use screw (B) to fix the display on the stand (C) .

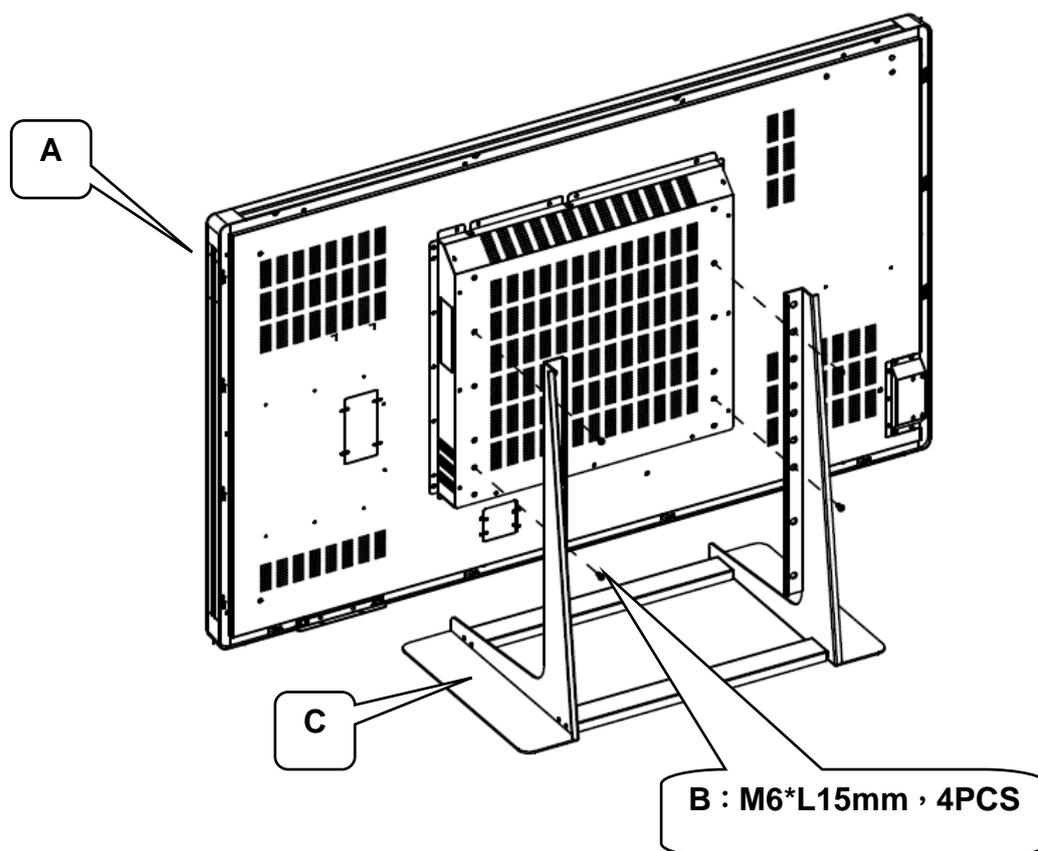

VI、65”~70”Stand Installation guide


Step 1 : Open the package and to take out the stand.

*Check the parts and that amount, please see the bellow picture.

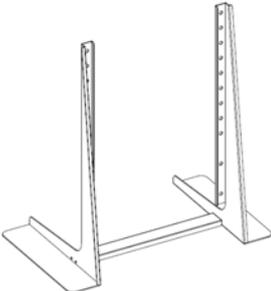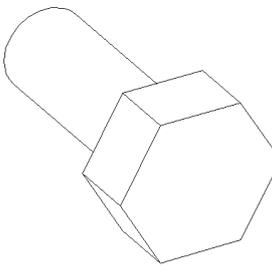	
1、Stand、1PCS	2、Screw M10*L25mm、4PCS

Step 2 : Mounting the display (A) on the stand.



*Use screw (B) to fix the display on the stand (C) .

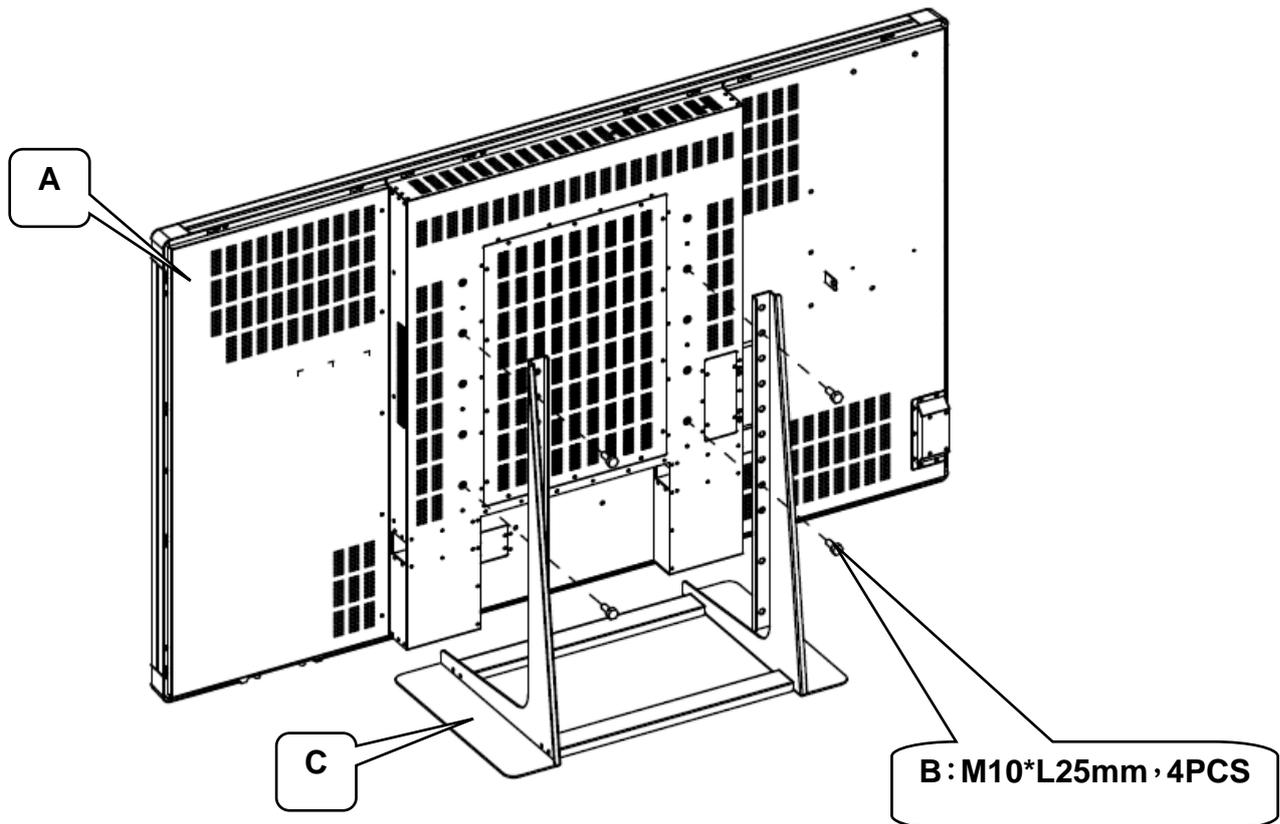

VII、84”Stand Installation guide


Step 1 : Open the package and to take out the stand.

*Check the parts and that amount, please see the bellow picture.

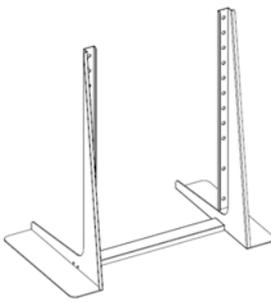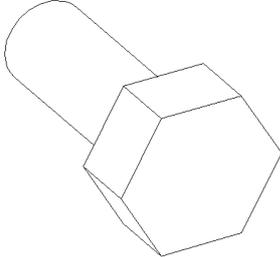	
1、80" Stand、1PCS	2、Screw M4*L8mm、4PCS

Step 2 : Mounting the display (A) on the stand.

*Use screw (B) to fix the display on the stand (C) .



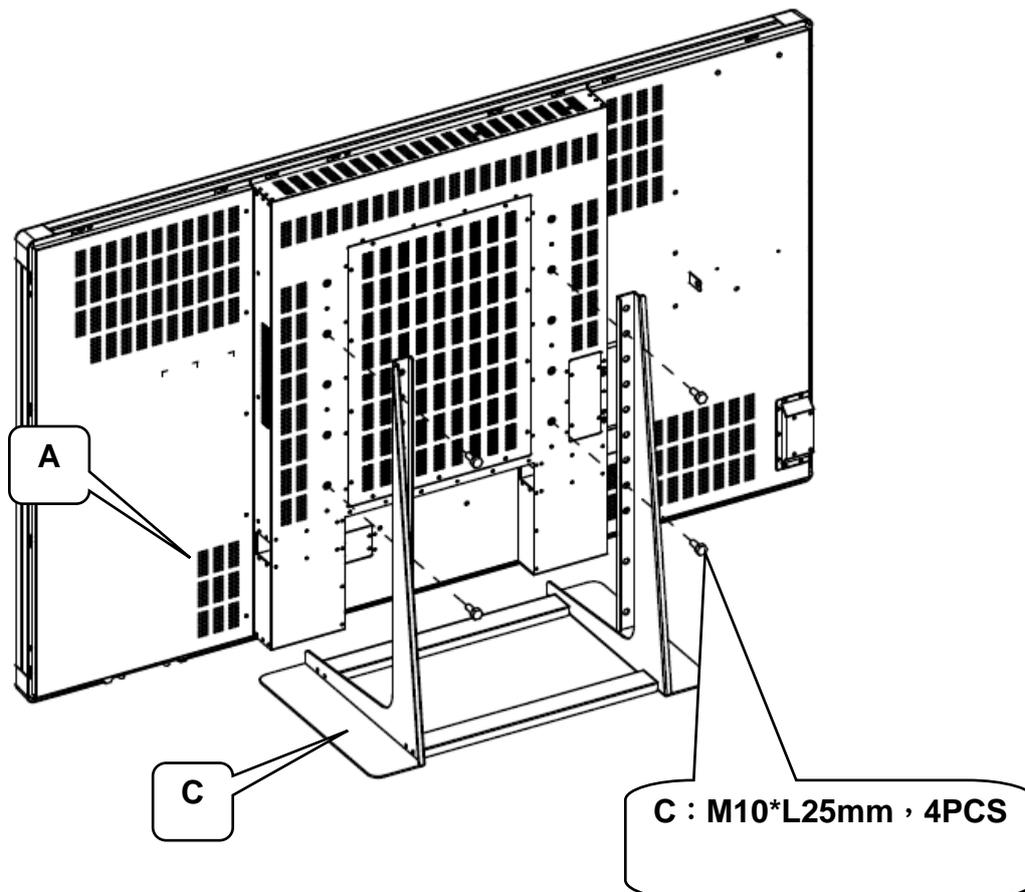


VIII、42"~84" Stand Assembly guide

Step 1 : Open the package and to take out the stand.

*Check the parts and that amount, please see the bellow picture.

Step 2 : Use screw (A) to fix the stand B case between (B) and (C) .

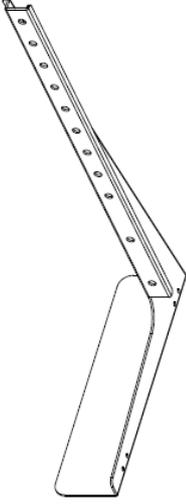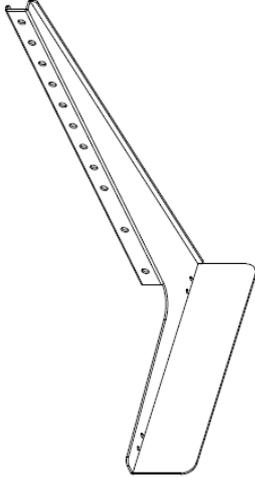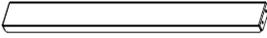			
1、Stand R case、1pcs .	2、Stand L case、1pcs .	3、Stand B case、1pcs .	4、Screw M4*L8mm、8pcs .

